


NOTE: To prevent electrical shock, disconnect transformer from electrical supply before installation or service.

1. Stake fixture into ground leaving bottom of fixture body a minimum of 2" above grade.
2. Strip the two (2) leads from the fixtures 18-2 lead wire and connect to main 12V supply cable.
3. Provide power to the fixture and check for proper operation.


NOTE: SL-07-SMGM-LEDM models have integrated 12VAC input LED driver & module on board. No need for external drivers.

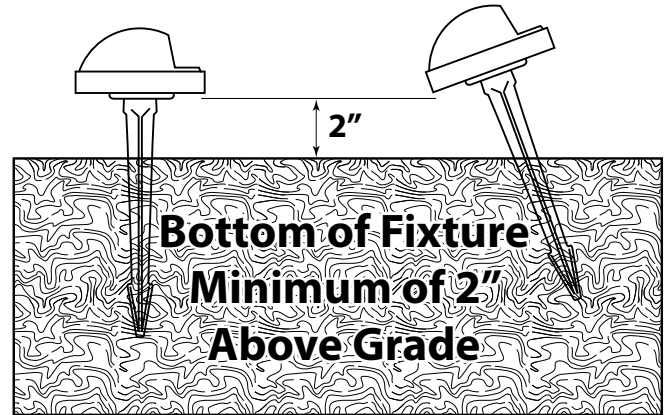

LED WARNING
LEDs For Use With Magnetic Transformers Only
Electronic Transformers Will Damage LED
Components and VOID WARRANTY

LAMP REPLACEMENT SL-07-SMGMX series

1. Turn off power.
2. Loosen two (2) slotted set screws and remove cover.
3. Replace Bi-Pin lamp with correct type and wattage marked on fixture label. (10w Max)
4. Reinstall cover and tighten two (2) slotted set screws to secure cover.

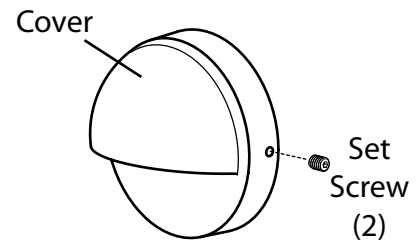

CAUTION: Do not exceed maximum wattage marked on fixture label.

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE AND INJURY TO PERSONS:

1. Lamp gets hot quickly; turn off, unplug/disconnect and allow to cool down before replacing the light bulb.
2. **DO NOT** touch hot lens, use guard or enclosure.
3. **DO NOT** look into lamp when on.
4. Keep lamp away from materials that may burn.
5. Use only with wattage/lamp marked on fixture warning and instructions.
6. Use the correct light bulb base with the correct socket.
7. **DO NOT** touch lamp at anytime. Use a lint-free cloth when handling the Halogen light bulbs as oil from skin may damage lamp and shorten lamp life.
8. **DO NOT** operate fixture with missing or damaged cover or lens.