


INSTALLATION INSTRUCTIONS FOR 12v DL-41 MINI FLOOD LIGHT

INSTALLATION FOR DL-41

NOTE: To prevent electrical shock, disconnect transformer from electrical supply before installation or service.

- 1. Thread FA-03 Black ABS stake onto bottom of swivel.
- 2. Route lead wire to main 12V supply cable and make connection. We recommend our **FA-05** Quick Connector (sold separately.)
- 3. Provide 12V power to fixture and check for proper operation.

NOTE: All mounting stakes can be pressed or hammered into the ground with a standard hammer or rubber mallet. We recommend our Focus **FT-01** Stake Installation Tool. Always leave the top 1" section of the stake above ground to help isolate the metal from potentially corrosive soils. Fixture wire should be buried underground to prevent detachment and for a clean look.

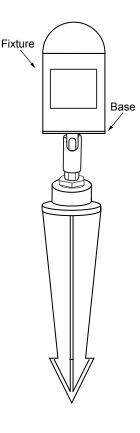

LAMP INSTALLATION/REPLACEMENT

- 1. Turn off power.
- 2. Remove two (2) screws closest to the bottom base (flat side) of the fixture using a #2 Phillips screwdriver
- 3. Holding onto bottom base and sides of housing gently pull housing off of the base. Be careful not to touch or put pressure on the lens.
- 4. Pull Bi-Pin light bulb away from socket to release. Replace with correct Bi-Pin light bulb type and wattage marked on fixture label.
- 5. Reinstall housing onto base and tighten two (2) screws to secure housing.

CAUTION: Do not exceed maximum wattage marked on fixture label.

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE AND INJURY TO PERSONS:

- 1. Lamp gets hot quickly; turn off, unplug/disconnect and allow to cool down before replacing the light bulb.
- 2. DO NOT touch hot lens, use guard or enclosure.
- 3. **DO NOT** look into lamp when on.
- 4. Keep lamp away from materials that may burn.
- 5. Use only with wattage/lamp marked on fixture warning and instructions.
- 6. Use the correct light bulb base with the correct socket.
- 7. **DO NOT** touch lamp at anytime. Use a lint-free cloth when handling the Halogen light bulbs as oil from skin may damage lamp and shorten lamp life.
- 8. **DO NOT** operate fixture with missing or damaged shield or lens.