



## INSTALLATION INSTRUCTIONS

## Flex Clamp (-FC) Models

**IMPORTANT NOTE:**

- Surface may become hot. Allow to cool down prior to replacing LED.
- Do not look into LED when on.
- Use only with correct wattage/LED marked on fixture.
- Do not operate fixture with missing or damaged parts.

**MAINTENANCE:** To assure proper operation and efficiency, ensure all seals, anchor bolts and connections are properly secured. A regular scheduled service is recommended.

**SAFETY WARNING:** To prevent electrical shock, turn off electrical supply at circuit breaker when installing or servicing.

**NOTE:** Save these instructions for future reference.

**INSTALLATION FOR BBQ LIGHT FIXTURES:**

1. Rotate adjustable vise screw to open wide enough to slip over table/counter/grill edge.
2. Secure fixture by rotating clamp clockwise and firmly hand tighten.
3. Adjust the flexible arm to desired direction.
4. Plug fixture into GFCI protected outlet and turn on switch located on mounting clamp.
5. 120V outdoor portable BBQ light fixtures have a three prong grounded plug as a feature to reduce the risk of electrical shock. This plug will fit in a grounded outlet only one way. If the plug does not fit fully in the outlet contact a qualified electrician.

**CAUTION:** Risk of electric shock. Do not use near water or where water may accumulate. Keep fixture at least 16 feet from pools and spas. KEEP PLUG DRY!

**IMPORTANT INFORMATION:**

- Only use extension cords that are rated for outdoor use and have a three prong grounded plug and grounded receptacle.

- Extension cords rated for outdoor use include types: SW, SW-A, SOW, SOW-A, STW, STW-A, SJW, SJW-A, SJOW, SJOW-AM, SJTW, SJTW-A, SJTOW, SJTOW-A

- For safety, Ground Fault Circuit Interrupter (GFCI) protection must be provided on the circuit(s) or outlet(s) to be used for outdoor portable BBQ light fixtures.

