

Digital Timer Instructions

2013 Model

A total of 7 "On/Off" settings can be programmed into the Digital Timer. This includes settings for weekday and/or weekends enabling the user to customize their lighting system based on their weekly schedules. For example, if you want the lights to only be on from 6pm to 11pm nightly but turn on at 4:30pm on weekdays, this can be set into the Digital Timer.

Initialize the Digital Timer

- 1. Power switch on transformer should be left in the "ON" position.
- 2. Push the reset key with a paper clip or pencil tip. The display will flash.
- 3. Press and hold the Clock button and **h+** simultaneously to access the 12:00 AM screen.
- If your time zone is currently in Daylight Savings Time press the +1h button. Go to Setting Current Time below.
 - If your time zone is not in Daylight Savings Time proceed to Setting Current Time.

Setting Current Time

- 1. Press and hold the "Clock" button during this entire procedure.
- 2. Press the h+ button to advance the hours.
- 3. Press the m+ button to advance the minutes.
- 4. Press the Day button to advance the current day of week.
- 5. Release the "Clock" button once time and day are correct.

Manual On/Off function

Pressing the Override button will alternate the unit On and Off.

Programming On/Off Events

- 1. Press the "Timer" button once. 1 ON --:-- appears.
- 2. Press Day button to scroll through days and select a single day or block.
- Using the h+ and m+ buttons enter the desired ON time. When complete press the Timer button once.
- 4. Next, **1 OFF** --:-- will be displayed. Using the **h+** and **m+** buttons enter the desired time off. When complete press the Timer button once.
- 5. If complete press the "Clock" button to return to current time.
- 6. Note that a total of 7 On & 7 Off events can be programmed.


Block Programming

- When programming On/Off events, all days are indicated by default.
 To change the day selection simply keep pressing the Day button and the display will change through different weekday and weekend blocks.
- Follow the programming steps above to set On/Off events for your desired blocks.

Deleting Programs

- 1. Press the Timer button until the desired program is displayed.
- 2. Then press and hold the h+ and m+ buttons until --:-- is displayed.
- 3. Press the Timer button to complete deletion of program.
- 4. When finished press the Clock button to return to current time.

Note: To reset all programmed events and time push the reset key with a paper clip or pencil tip.

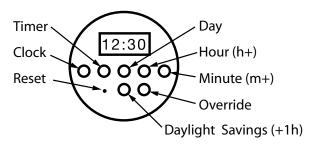

Adjusting Daylight Savings Time

 Press the +1h button to add the Daylight Saving Time hour to the current time or remove the hour to return to standard time.

Note: Do not perform this procedure if your area does not use Daylight Saving Time.

Power Loss Functions

In the event of power loss, the timer retains all settings and does the following:

- Relay will be in the OFF state
- Upon power restore, relay will go to the current programmed state.

08/20/2014